

DIAVLO SERIES 45 & 20 watt models
RD45H = 45watt head with (2) 6L6 power tubes
RD45-212 = 45watt Combo with (2) 50watt 12" Randall RD1250-8 speakers
RD20H =20watt head with (2) 6V6 power tubes
RD20-112 = 20watt Combo with (1) 50watt 12" Randall RD1250-8 speaker
2 channels + boost mode
Class A discrete Instrument level loop
Speaker emulated XLR output with Ground lift and silent operation
Heavy Duty Steel Grill
2 button Channel/Boost footswitch included

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Portable Cart Warning

WARNING-To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that object filled with liquids, such as vases, shall not be placed on the apparatus.

WARNING-The mains plug/appliance coupler is used as a disconnect device; the disconnect device shall remain readily operable.

WARNING-The apparatus should be connected to a mains socket outlet with a protective earthing connection.

WARNING: For the terminals marked with symbol of ⚡ may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the use of ready-made leads or cords.

Avertissement: pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité. La prise du secteur est utilisée pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée la prise doit être débranchée du secteur.

Randall Warranty

Randall Amplifiers, a Division of U.S. Music Corporation warrants the product you have purchased to be free of defects in materials and workmanship in normal use for a period of two (2) years from the date of original purchase. This warranty shall run to the original purchaser when purchased from an Authorized Randall Dealer. The manufacturer warrants speakers for a period of (1) years. The manufacturer warrants tubes for a period of (90) days. Defective parts found during the applicable warranty period with proof of purchase will be replaced or repaired without charge if the complete product is returned to US Music Corp or any Authorized Randall Service Center within the U.S.A. Randall reserves the right to use materials readily available at the time of the repair. All Warranty service requires Proof of Purchase (sales receipt) to be presented at time of service request. Any repair or service performed by any person of entity other than an Authorized Service Center is not covered by this limited warranty. The customer pays transportation to and from Randall factory service or any Randall Authorized Service Center. Rental stock is warranted for (1) year from date of invoice to the Authorized dealer. Warranty on rental units is not transferable.

What is covered against manufacturing defects

Parts and Labor to correct any defect in materials used and any defect attributable to workmanship.

What is not covered:

Shipping Damage. Report damage upon receipt of item to the carrier (i.e. UPS). Freight carrier must be notified upon receipt of items to insure freight damage claim resolution. Shipping damage not filed with carriers within (48) hrs upon receipt will not be covered under warranty. Report any shipping damage within (48) hrs of receipt to the Randall Customer Service Dept at 1-800-877-6863, ext. 5120. Keep all original documents and packing materials to insure freight damage claim resolution. Merchandise that has been modified after original shipment from the Randall factory. Products whose serial numbers have been altered or removed. Exterior normal wear and tear damage to the finish due to misuse, operation outside the specified ratings, neglect or accident. Warranty claims by anyone other than the original purchaser. Randall is not responsible for any items left in protective covers or cases, (We strongly advise that all personal items such as chords, cables, tuners, etc... be removed!) freight charges to and from the factory or an Authorized service center on customer owned goods, any and all charges incurred from priority service requests (Rush Service) or priority shipping for replacement parts. Any and all charges if no problem is found.

Return Authorization

All items being returned for any reason must have a Return Authorization number. This RA# must be placed on the outside of the carton of the item being returned or the carton will be refused upon delivery. Please call the customer service department at 1-800-877-6863, ext. 5120, for the return authorization number. Dealer stock items will be returned to the dealer freight prepaid.

An Authorized Warranty Service Center must perform any and all field warranty service work. Customer will not pay for parts and/or labor provided the problem found is within warranty guidelines. Proof of purchase must be provided at the time of service request. Transportation charges to and from the Authorized Warranty Service Center are the responsibility of the customer. Rush service charges and special freight charges for required parts are not covered under warranty and are also the responsibility of the customer. If a unit is not easily transported to an authorized service center, the customer is responsible for technician travel charges. Any charges for labor or processing when no problem is found are also not covered under warranty. Any charges incurred for work performed by an unauthorized service center are the responsibility of the customer.

Warranty terms may vary per country, check warranty terms with local Distributor or at point of purchase.

Randall®

A M P L I F I E R S




Models:
RD45H
RD45-212
RD20H
RD20-112

OPERATION MANUAL

For detailed product videos please visit our website at : www.randallamplification.com



Congratulations on the purchase of your new **RANDALL** RD SERIES Amplifier! We at Randall Amplification appreciate that you chose our brand of guitar instrument amplifiers and wish you years of great tone and enjoyable playing time with your new machine. Please review the safety instructions and be aware that the documentation provided in this manual references 120volt USA versions of the models covered. Note that the POWER listed on the power supply should be for your countries' power standard.

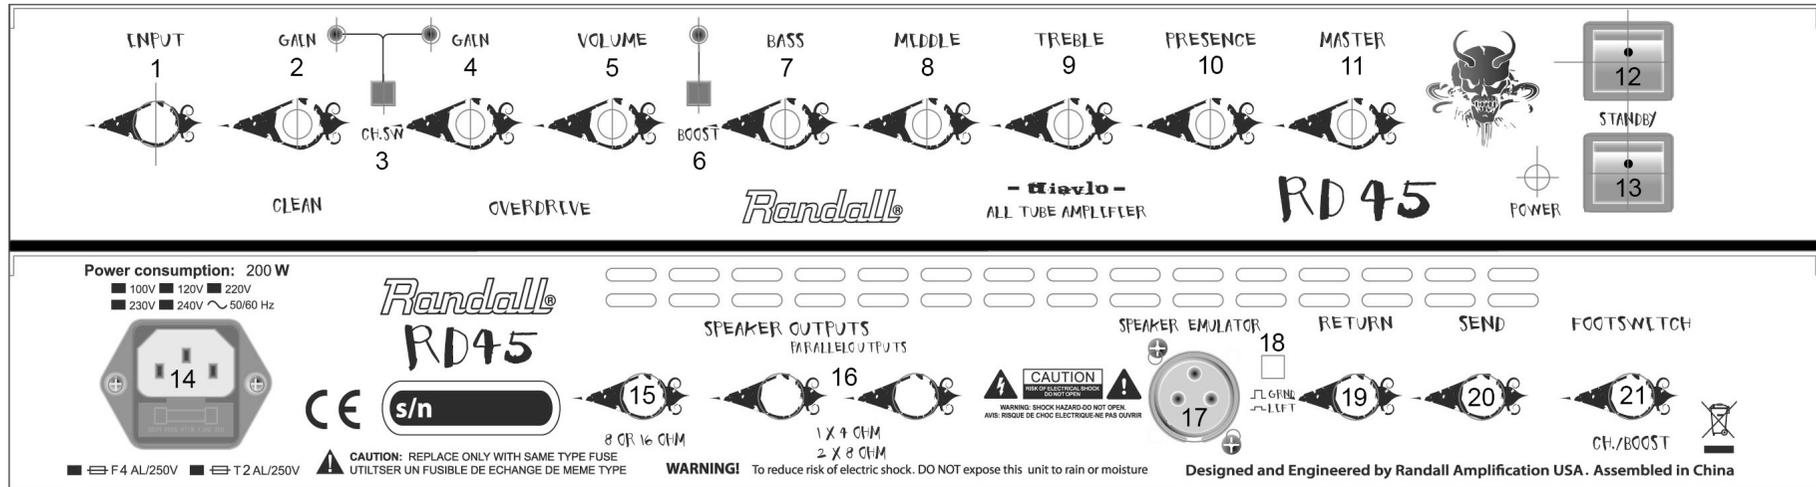

IMPORTANT NOTE: Never operate amplifier without proper speaker load plugged in!! (including silent mode)

1. 1/4" Guitar input - Plug your guitar into this jack/connector.
2. Clean Channel Volume- this controls the amount of clean channel signal, to achieve a more aggressive tone from the clean channel, lower master volume and crank the clean channel gain. Note that only the overdrive channel has separate Gain and Volume controls to match channel volumes.
3. Channel Selector Switch toggles between Clean and overdrive channels- (*Footswitchable- Foot controller will override panel function*)
4. Overdrive Channel Gain - This knob works as an aggressive all tube overdrive circuit. It dynamically responds with more overdrive as more input is fed from your pickups. Turn to the right for more saturation.
5. Overdrive Channel Volume- this control works as volume control of the overdrive channel only- Use this to match the output levels between the Clean and Overdrive channels. For cleaner tones, keep at lowest setting, turn volume all the way up and use gain knob as volume output control.
6. Boost - Adds extra layer of tube overdrive to both channels (*Footswitchable*)
7. Bass EQ Response - turn to the right for more bass/low frequency
8. Midrange EQ Response - adjusts middle frequencies- put this wherever you like.
9. Treble EQ Response - Hi Frequency adjustment to the tone circuit- "brightness"
10. Presence Response - this is tied to the power amp and effects the highest, brightest frequencies, this will help tailor the sound to best suit the brightness of your guitar.
11. MASTER - Overall volume output control. This feeds the speaker output. Note that to achieve cleanest tones, turn volume all the way up and use GAIN KNOB as volume control.

12. Standby/Play switch- Wait 5 seconds after powering amp on before switching from Standby to Play and visa-versa. NOTE: Leave Standby in ON position (with speaker plugged in!) for silent operation with Speaker Emulator output (see#17)
13. Power switch turns unit on and off
14. Power cable input for mains connection- Mains Fuse socket attached.
15. Single Speaker output - plug in 1x16Ω or 1x8Ω speaker cabinet into this jack- **NOT TO BE USED AT THE SAME TIME AS PARALLEL OUTPUTS!!! #16**
16. Parallel Speaker Outputs you can safely plug in the following speaker cabinet configurations: 1x4Ω, 2x8Ω **NOT TO BE USED AT THE SAME TIME AS SINGLE OUTPUT!!! #15**
17. Speaker Emulator - XLR Balanced output is signal fed post effects loop from the preamp (all three channels & EQ). This signal is then sent through the speaker emulator which simulates the sound and response of a mic'd up Randall 4x12 speaker cabinet. This function is useful as a Direct send to PA/FOH for silent stages, in ear monitor feed or send to external power amp. "Silent Mode" - For direct (silent) recording, STANDBY (#12) should in "operating" position (with speaker plugged in!!!). The preamp will send signal to the XLR output and be fed from the individual channel controls. MASTER VOLUME (#11) needs to be at zero setting for silent mode.
18. XLR ground lift changes the ground connection to fix ground loops when interfacing with other equipment - use at quietest setting for best performance.
19. Class A Discrete instrument level effects loop return. This plugs into external pedal effects unit output to complete signal "loop". Also serves as power amp input so external preamp can be plugged directly to power amp section with active volume control and speaker emulator XLR output.
20. Class A Discrete instrument level effects loop send. This plugs into external pedal effects unit input and feeds signal from the Gain and Tone knobs. Also serves as unbalanced preamp output send but will mute output unless return jack receives return signal.
21. Footswitch jack- Standard two button 1/4" TRS controls Channel and boost (Randall Model RF2T2C)