




EX15FX

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture

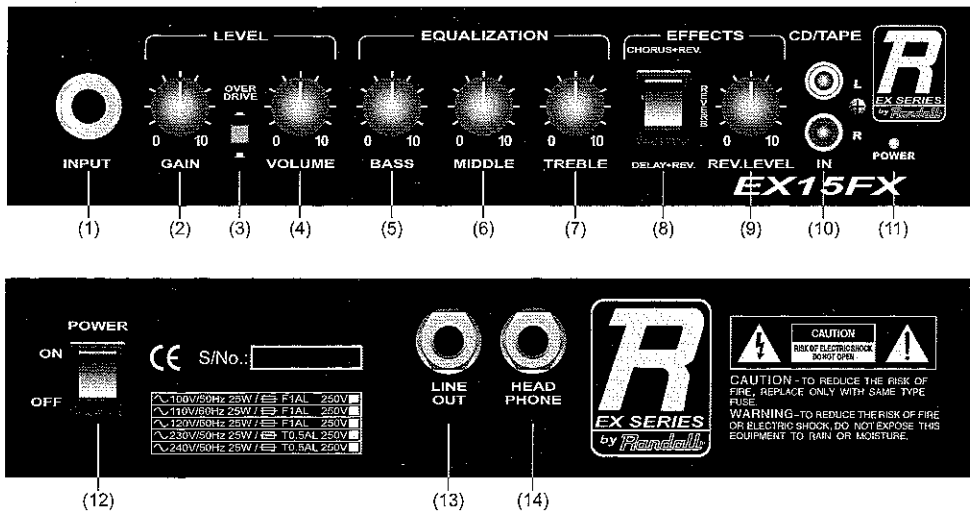

Features

- (1) Input : Connects to the input of any electric guitar
- (2) Gain: Adjusts the amount of distortion when the overdrive button is on or can be used to add more volume when overdrive button is off
- (3) Overdrive Switch: Activates distortion boost circuit
- (4) Volume: Controls the overall volume level of the amplifier
- (5) Bass: This controls the amount of overall bass frequencies
- (6) Middle: This controls the amount of overall mid-range frequencies
- (7) Treble: This controls the amount of overall treble or high frequencies
- (8) Effects Switch: Use to select the type of effects that you want with your guitar tone Choose either Reverb Chorus+Reverb or Delay+Reverb
- (9) Rev Level : This controls the overall amount of effects depending on which effect you have selected
- (10) CD/TAPE IN: Can be used to connect a CD/TAPE player to the amplifier for practice sessions
- (11) Power LED: This indicates power to the amp is on
- (12) Power Switch: Turns the amplifier ON or OFF
- (13) Line Out: A signal output only which should only be used connect to another power amplifier
- (14) Headphone jack: Connect to a stereo set of headphones for practice sessions

SPECIFICATIONS

Output Power	12Wrms into 8ohm at less10% THD
Input	Impedance : 500Kohm Maximum Input Level : -35dB
Power Consumption	25W
S/N Ratio	Greater Than 60dB
Speaker	6.5"
Phones	60mW into 8ohm
Equalization	Bass : +/- 15dB at 50Hz Middle : +/- 10dB at 600Hz Treble : +/- 18dB at 3KHz
Dimensions / Weight	310W x 320 Hx 210D mm / 5.8kgs